



720TMi

Programmable HMI Indicator/Controller

Version 1.04
720B Version 1.00

Installation Manual



RICE LAKE
WEIGHING SYSTEMS
To be the best by every measureTM

Contents

About This Manual	1
1.0 Introduction.....	1
1.1 Operating Modes.	2
1.2 Indicator Operations	2
1.3 Softkey Operations	3
1.4 System Configurations and Options.	4
1.5 Summary of Changes	5
2.0 Installation.....	6
2.1 Unpacking and Assembly	6
2.2 Enclosure Disassembly	6
2.3 Cable Connections	6
2.3.1 Cable Grounding.	6
2.3.2 Load Cells.	7
2.3.3 Serial Communications	7
2.3.4 Digital I/O	8
2.3.5 Detached Display Module (DDM).	8
2.4 Installing Option Cards.	8
2.5 Slot Assignments.	10
2.6 Enclosure Reassembly.	10
2.7 CPU Board Removal	10
2.8 Battery Replacement	11
2.9 Replacement Parts and Assembly Drawings	11
2.9.1 Universal Model	11
2.9.2 Panel Mount Controller	15
2.9.3 Panel Mount Display	17
3.0 Configuration	18
3.1 Configuration Methods	18
3.1.1 Revolution III Configuration	18
3.1.2 Serial Command Configuration	19
3.1.3 Front Panel Configuration	19
3.1.4 Multi-Range and Multi-Interval Scales	19
3.2 Menu Structures and Parameter Descriptions	20
3.2.1 SCALES Menu	21
3.2.2 SERIAL Menu	32
3.2.3 FEATURE Menu	36
3.2.4 PFORMT Menu.	40
3.2.5 DIG I/O Menu	41
3.2.6 ALGOUT Menu	43
3.2.7 VERS Menu	44
4.0 Calibration	45
4.1 Gravity Compensation	45
4.2 Front Panel Calibration.	45
4.3 Serial Command Calibration	46
4.4 Revolution Calibration	47



Technical training seminars are available through Rice Lake Weighing Systems.
Course descriptions and dates can be viewed at www.ricelake.com or obtained
by calling 715-234-9171 and asking for the training department

5.0	Using Revolution	48
5.1	Installing and Starting the Program	48
5.2	Configuring Scales	48
5.3	Connecting to the Indicator	49
5.3.1	Downloading to the Indicator	49
5.3.2	Uploading Configuration to Revolution	49
5.4	Installing Software Upgrades	50
6.0	Print Formatting	51
6.1	Print Formatting Commands	51
6.2	Default Print Formats	53
6.3	Customizing Print Formats	54
6.3.1	Using Revolution	54
6.3.2	Using Serial Commands	54
7.0	Truck Modes	55
7.1	Using the Truck Modes	55
7.2	Using the Truck Regs Display	55
7.3	Weigh-In Procedure	56
7.4	Weigh-Out Procedure	56
7.5	Single-TransactionTareWeights and IDs	56
8.0	Setpoints	57
8.1	Batch and Continuous Setpoints	57
8.2	Setpoint Menu Parameters	60
8.3	Batch Operations	71
9.0	Using ProAction PCEE	73
10.0	Serial Commands	78
10.1	The Serial Command Set	78
10.1.1	Key Press Commands	78
10.1.2	Reporting Commands	79
10.1.3	Clear and Reset Commands	79
10.1.4	Parameter Setting Commands	79
10.1.5	Normal Mode Commands	86
10.1.6	Batching Control Commands	87
11.0	Appendix	88
11.1	Troubleshooting	88
11.1.1	Option Card Diagnostic Errors	89
11.1.2	Using the HARDWARE Command	89
11.1.3	Diagnostic Boot Procedure	89
11.1.4	Onboard Diagnostic LEDs	89
11.1.5	Using the XE Serial Command	90
11.2	Regulatory Mode Functions	91
11.3	Serial Scale Interface	92
11.4	Local/Remote Operation	93
11.5	Custom Stream Formatting	93
11.6	Data Formats	96
11.7	Digital Filtering	97
11.8	Conversion Factors for Secondary Units	98
11.9	PS/2 Keyboard Interface	99
11.10	Audit Trail Support	100
11.11	Display Module Configuration	100
11.12	Dimension Drawings	101
11.13	Printed Information	102
11.14	Specifications	103
720i	Limited Warranty	104

This is a “Table of Contents preview” for quality assurance

The full manual can be found at <http://the-checkout-tech.com/estore/catalog/>

We also offer free downloads, a free keyboard layout designer, cable diagrams, free help and support.

<http://the-checkout-tech.com> : *the biggest supplier of cash register and scale manuals on the net*